


# RF RGBW Receiver

09.1029W.04299



**Important:** Read All Instructions Prior to Installation

## Function introduction

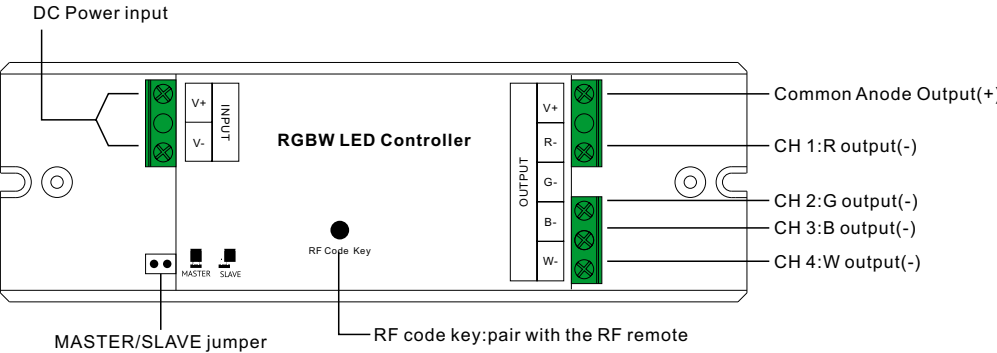

## Product Data

Input Voltage	Output Current	Output Power	Remarks	Size(LxWxH)
12-24VDC	4x5A	4x(60-120)W	Constant voltage	145x46.5x16mm

- Radio Frequency : 868/915/434mhz
- Waterproof grade: IP20

## Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.


## Pair/delete the pairing with RF remote

- 1.Do wiring according to connection diagram.
- 2.Pair RF Receiver with RF remote: please refer to the instruction of the remote that you would like to pair with.
- 3.Delete the pairing:
  - (1)Wire up the RF receiver correctly, power on.
  - (2)Press and hold down the “ **RF Code Key**” button on receiver for over 3 seconds until the LED indicator flashes, which means well deleted.

## MASTER/SLAVE jumper:

In a group of multiple receivers, in order to get a good sync of RGB running effect, please set only 1 receiver as MASTER, the other receivers as SLAVE.  
**After setting the Master, the Master receiver need to power off and on once to make the Master function take effect.**

## Wiring Diagram

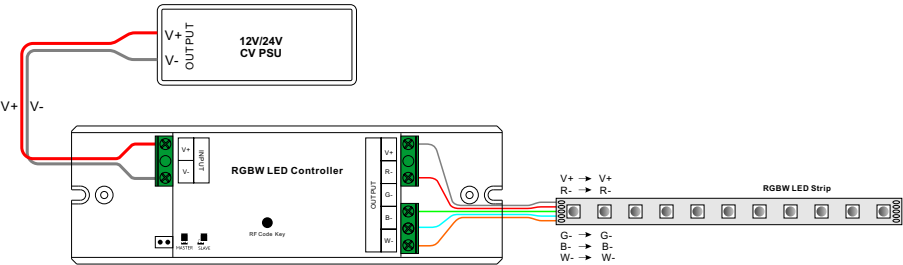

## Product Dimension

