DARKMATTERS

102.287 DarkMatters Media Wall Dedicated Handset Controller

Thank you for purchasing the 102.283 DarkMatters Scenes Dimmers Controller, please read the instructions below to get the best out of your new product.

This feature-rich handset from our DarkMatters range of media wall lighting products enables you to control your media wall lighting wirelessly from up to 30m away.

The handset requires 2x AAA batteries (not supplied).

Note: line of sight is not required, however walls and other barriers may reduce this range.




Features

- Easy Pairing
- Power On / Off
- Touch Disc for Instant Dimming
- Smooth Push Button Up & Down Dimming
- Night Mode
- 30 second to Off Timer
- Four Pre-Set Dimming Instant Levels
- Four Dimming Scenes for Save & Instant Recall
- Handset Wall Mounting Bracket Included

NEED AN EXTRA HAND?
Scan the QR code on the left and watch our instructional video all about to pair your remote with the controller

Operation

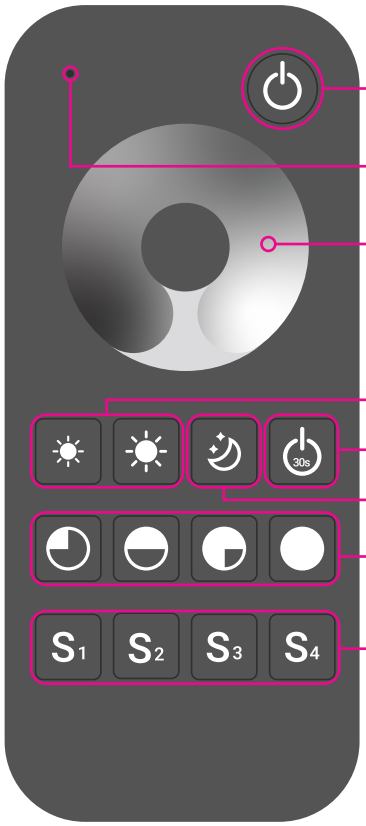

TOUCH WHEEL
The touch sensitive disc is a fast method of selecting the brightness of the Neon in your media wall, simply run your finger around the disc to choose the level of light you require.

ADJUST BRIGHTNESS
A more accurate method of dimming is to use the main brightness Up & Down buttons below the touch disc. By pressing these buttons, you can accurately adjust the dimming level to suit the ambience required.

TURN OFF AFTER 30 SECONDS
An off button featuring a 30 second delay timer is also located below the touch disc, when pressed the lights will stay illuminated for 30 seconds before switching off. This convenient feature allows you time to exit a room keeping the lighting on at the pre-set level.

NIGHT MODE
Below the touch disc is the "Night Mode" button, this instantly sets the dimming level to a very low background glow.

25%, 50%, 75% AND 100% BRIGHTNESS
There are four pre-set dimming levels that can be instantly selected, these levels refer to 25%, 50%, 75% or full brightness.

SCENE BUTTONS
At the bottom of the handset there are four storable scene buttons, S1, S2, S3 & S4. If you use the touch disc or the brightness up and down buttons to select a level of light that you want to save, first set the level required then press and hold one of the scene buttons for two seconds. The indicator light on the handset will flash to confirm your selection. To recall the stored scene, briefly press the appropriate scene button and the stored brightness level will be instantly recalled.

DARKMATTERS


102.287 DarkMatters Media Wall Dedicated Handset Controller

How to Pair your Handset with the DarkMatters Media Wall Dimmer Controller (102.283)

Please ensure the controller is connected correctly and powered on. To pair the handset to the wired controller, there are two methods (see note below):




PAIRING

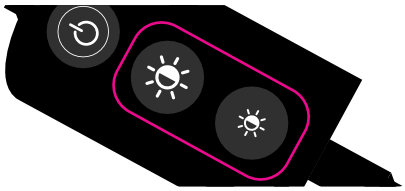

On the wired controller (102.283), press and hold down the Brightness “up & down” buttons together for 2 seconds, the connected lights will flash twice.




Immediately press and hold down the “Power On” button on the handset 2 seconds.

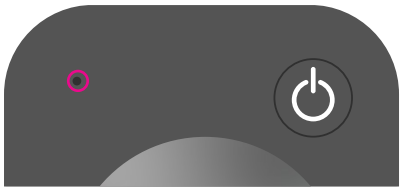


The connected lights will flash 3 times to indicate successful pairing.

UN-PAIRING

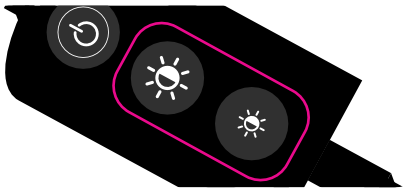

On the wired controller (102.283), press and hold down the Brightness “up & down” buttons together for 5 seconds.

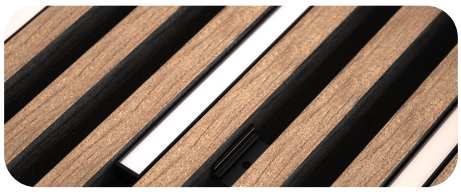

The connected lights will flash 5 times. This will delete all paired remote controllers.

NEED AN EXTRA HAND?
Scan the QR code above and watch our instructional video all about to pair your remote with the controller

POWER RE-START METHOD

PAIRING



Turn off at the wall and on the wired controller (102.283) twice in succession (see note below).



Immediately press the “On / Off” key 3 times in succession on the handset.



The LED Indicator will flash three times to indicate successful pairing.

UN-PAIRING



Power off and on the wired controller (102.283) 5 times in succession (see note below).



Immediately press the “On / Off” key on the wired controller 5 times in succession.



The LED Indicator will flash 5 times to indicate successful unpairing.

Note: When pairing or un-pairing a handset, it is important to wait for 30 seconds between each “Pair / Un-Pair” operation. For the Power Re-Start method, make sure you wait for the connected lights to illuminate before powering off and on again. **Timing for this method is crucial.**