








Important: Read All Instructions Prior to Installation

Function introduction

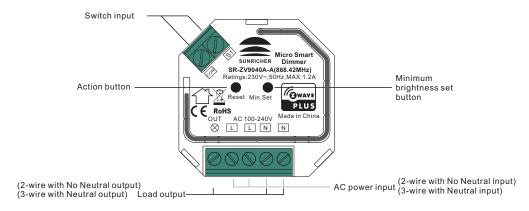

Product Data

Z-Wave Frequency	868.42 MHz (EU)
Input Voltage	AC100-240V
Output Voltage	AC100-240V
Output Current	1.2A max.
Operating temperature	0 to 40°C
Relative humidity	8% to 80%
Dimensions	45.5x45x20.3mm

Compatible Load Types					
Load Symbol	Load Type	Maximum Load	Remarks		
→	Dimmable LED lamps	200W @ 220V	Due to variety of LED lamp designs, maximum number of LED lamps is further dependent on power factor result when connected to dimmer.		
-	Dimmable LED drivers	200W @ 220V	Maximum permitted number of drivers is 200W divided by driver nameplate power rating.		
-\\[C	Incandescent lighting, HV Halogen lamps	288W @ 220V			
	Low voltage halogen lighting with electronic transformers	200W @ 220V			

Safety & Warnings

- · DO NOT install with power applied to device.
- · DO NOT expose the device to moisture.

Quick Start

How to install:

- · Step 1: power on the Z-Wave Micro Smart dimmer.
- Step 2: activate inclusion mode on your Z-Wave controller.
- · Step 3: activate inclusion mode of the dimmer by triple press the action button on the dimmer. The dimmer will be included to Z-Wave network.

Product Description

The micro smart dimmer is a Z-Wave device designed to work with various types of light sources. It may be connected to two-wire or three-wire configuration so it can operate with or without neutral lead. The dimmer can switch or dim connected light source either through Z-Wave devices or through the wall switch connected directly to it. The smart dimmer is equipped with an algorithm of smart light source detection which makes configuration easier and ensures high compatibility of the device. It may be used as a switch with nondimmable light sources (in 3-wire connection).

The dimmer can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

The encryption mode that the dimmer supports is S2 Unauthenticated. When the dimmer is being included into a Z-Wave network, you can use your primary controller/gateway to enable encryption mode or disable encryption. (The primary controller/gateway shall support encryption mode configuration). The dimmer supports OTA and can update firmware wirelessly.

Main Features:

- · Compatible with any Z-Wave or Z-Wave+ Controller,
- Controlled by Sunricher EasyHome or any other Z-Wave controller,
- Advanced microprocessor control,
- Implemented algorithm of smart light source detection,
- · Auto-adjustment of the appropriate control mode to connected load,
- Active power and energy metering functionality,
- · Soft start function.
- · Memory of the last lighting level settings,
- Works with various types of switches momentary, toggle, three-way, etc.
- · Active element: semiconductor electronic switch,
- To be installed in wall switch boxes of dimensions allowing for installation, conforming to provisions of applicable regulations,
- The Bypass is an extension unit.

As a dimmer it operates under the following loads:

- Conventional incandescent and HV halogen light sources
- ELV halogen lamps and dimmable LED bulbs (with electronic transformers)

- MLV halogen lamps (with ferromagnetic transformers)
- Dimmable LED bulbs
- · Dimmable compact fluorescent CFL tube lamps
- Supported dimmable light sources (power factor > 0.5) with minimal power of 5VA using the Bypass (depending on the type of load)

Without dimming function it may work with:

- · Compact fluorescent CFL tube lamps with electronic ballast
- · Fluorescent tube lamps with electronic ballast
- LED bulbs (power factor > 0.7)
- Supported light sources (power factor > 0.5) with minimal power of 5VA using the Bypass (depending on the type of load)

The micro smart dimmer uses different operating modes to control following types of loads:

- "Trailing edge" for resistive loads
- "Trailing edge" for capacitive loads
- "Leading edge" for inductive loads

Installation Guide

Please read carefully the enclosed user manual before installation of the in-wall dimmer, in order to ensure an error-free functioning.

Minimum Brightness Setting Button

- 1. Press and hold down the button for over 3 seconds: current brightness will be set as minimum brightness if it is lower than 50%. Minimum brightness will be reset to 1% if current brightness is higher than 50%.
- 2. Short press the button twice: the load's brightness will be set to 99%.

ATTENTION: Prior to the assembly of the product, the voltage network has to be switched OFF and ensured against re-switching.

Inclusion (adding to a Z-Wave network)

- 1. Set primary controller/gateway into inclusion mode (Please refer to your primary controller's manual on how to turn your controller into inclusion).
- 2. Power on the in-wall dimmer and set it into inclusion mode. There are two methods to set the in-wall dimmer into inclusion mode:
- 1)Repower on the dimmer, it will be set into inclusion mode automatically, and waiting to be included.
- 2) Triple press the action button on the dimmer, it will set the dimmer into inclusion mode.

The connected light will stay solid on for 3 seconds to indicate successful inclusion.

Exclusion (removing from a Z-Wave network)

There are two exclusion methods:

Method 1: Exclusion from the primary controller/gateway as follows:

- 1. Set the primary controller/gateway into exclusion mode (Please refer to your primary controllers manual on how to set your controller into exclusion).
- 2. Triple press the action button, the dimmer will be set to exclusion mode, and waiting to be excluded, then the dimmer will be excluded from the network.

Method 2: Factory reset the dimmer will force it to be excluded from a network. (please refer to the part "Factory Reset" of this manual)

Note: Factory reset is not recommended for exclusion, please use this procedure only if the primary

controller/gateway is missing or otherwise inoperable.

Factory Reset

Press and hold down the action button for over 10 seconds, the dimmer will be reset to factory defaults.

Association

Z-Wave devices control other Z-Wave devices. The relationship between one device controlling another device is called association. In order to control a different device, the controlling device needs to maintain a list of devices that will receive controlling commands. These lists are called association groups and they are always related to certain events (e.g. button pressed). In case the event happens all devices stored in the respective association group will receive a common wireless command.

Association Groups:

Association Groups	Group Name	Max Nodes	Description
		When press and hold down "Reset" button for 10S to reset the dimmer, send "Device Reset Locally Notification CC" to associated devices of this group to report factory reset information.	
			When load state changes, send "Basic Report CC" to associated devices of this group.
Group 1	Lifeline	5	When a load over current is detected, send "Over-current detected" to Lifeline.
			When a mains voltage drop is detected, send "Voltage drop/drift" to Lifeline.
			5. When over temperature is detected, send "Emergency shutoff status" to Lifeline.

Set and unset associations:

(Note: All association information will be cleared automatically once the dimmer is excluded from a network.)

Set association by operating primary controller/gateway to send packets to the dimmer:

The primary controller/gateway sends packets to the dimmer using "Command Class ASSOCIATION"

Operating the device

Short press the action button on the dimmer to switch ON/OFF the load.

Node Information Frame

The Node Information Frame is the business card of a Z-Wave device. It contains information about the device type and the technical capabilities. The inclusion and exclusion of the device is confirmed by sending out a Node Information Frame. Beside this it may be needed for certain network operations to send out a Node Information Frame.

How to send out Node Information Frame:

When the dimmer is set to inclusion/exclusion mode again, it will send out Node Information Frame, there are 2 kinds of operation as follows:

1. triple press the action button, the dimmer will be set to inclusion/exclusion mode, then send out Node

Information Frame.

- 2. When the dimmer is under inclusion mode, there are two kinds of operation:
- 1) Triple press inclusion/exclusion button, the dimmer will be set to inclusion mode again, and send out Node Information Frame.
- 2) Power off and power on the dimmer, it will be set to inclusion mode automatically, and send out Node Information Frame.

Technical Data

Wireless Range	up to 100 m outside, on average up to 40 m inside buildings
SDK	6.71.03
Explorer Frame Support	Yes
Device Type	Light Dimmer Switch
Generic Device Class	GENERIC_TYPE_SWITCH_MULTILEVEL
Specific Device Class	SPECIFIC_TYPE_POWER_SWITCH_MULTILEVEL
Role Type	Always On Slave (AOS)
Routing	Yes

SUPPORTED COMMAND CLASS

Node Info	Security Command Supported Report		
COMMAND_CLASS_ZWAVEPLUS_INFO		COMMAND_CLASS_MANUFACTURER_S PECIFIC	V2
COMMAND_CLASS_TRANSPORT_ SERVICE	V2 COMMAND_CLASS_VERSION		V2
COMMAND_CLASS_SECURITY	V1	COMMAND_CLASS_SWITCH_MULTILEVEL	V4
COMMAND_CLASS_SECURITY_2	V1	COMMAND_CLASS_SCENE_ACTIVATION	V1
COMMAND_CLASS_SUPERVISION	V1	OMMAND_CLASS_SCENE_ACTUATOR_CONF	V1
		COMMAND_CLASS_NOTIFICATION	V8
		COMMAND_CLASS_CONFIGURATION	V2
		COMMAND_CLASS_ASSOCIATION_GRP_INFO	V3
		COMMAND_CLASS_ASSOCIATION	V2
		COMMAND_CLASS_FIRMWARE_UPDATE_MD	V4
		COMMAND_CLASS_POWERLEVEL	V1
		COMMAND_CLASS_DEVICE_RESET_	V1
		LOCALLY	V 1

Notification Command Class

Voltage drop/drift

The dimmer supports Voltage drop/drift, when a mains voltage drop is detected, the dimmer will send out Voltage drop/drift to Lifeline.

Notification Type	Notification
Power management (0x08)	Voltage drop/drift (0x05)

Over-current detected

The dimmer supports Over-current detected, when over current of the load is detected (current over 1.5A continuously for over 20 seconds), the dimmer will send out Over-current detected to Lifeline.

Notification Type	Notification	
Power management (0x08)	Over-current detected (0x06)	

Emergency shutoff

The dimmer supports Emergency shutoff, when inside temperature is over 90° and detected by the built-in thermistance, the dimmer will send out Emergency shutoff status to Lifeline.

Notification Type		Notification	
	System (0x09)	Emergency shutoff status (0x07)	

Configuration Command Class

Parameter	Size		Description	Default Value
2	1	Info: Saving load state before power failure 0 — shutoff load 1 — turn on load 2 — save load state before power failure		2
3	1	Info: Enable/disable to send the basic report to the Lifeline when the load state changed (When value set as 1, repower on the dimmer, it will send Basic report automatically) 0 - Disable to send Basic report 1 - Enable to send Basic report		1
4	1	Default fade time (u function as Duration Valid value: 0~0xFF Value 0x00 0x010x7F 0x800xFE	,	1

5	1	Setting minimum brightness value Valid value: 0~50, the bigger the value is, the higher the load's minimum brightness is	0
6	1	Setting maximum brightness value Valid value: 0~100	100
7	1	Choose MOSFET driving type 0 – trailing edge 1 – leading edge	0
8	1	External switch type 0 – Push button switch 1 – normal on/off switch 2 – 3-way switch	0
9	1	Added to and removed from a network through external switch (when enables this function, triple press the external switch within 1.5 seconds to be added to or removed from a network) 0 - disable 1 - enable	1
10	1	Enable/disable to detect load after re-power on (detect load type, minimum brightness, maximum brightness) 0 - disable 1 - enable to detect every time after re-power on 2 - enable to detect only after first re-power on	0
11 (read only)	1	Wiring type 0 - unknown 1 - 2 Wire With No Neutral 2 - 3 Wire With Neutral	0
12 (read only)	1	Load type 0 - unknown 1 - resistive 2 - inductive 3 - capacitive	0
13	1	Enable/disable over current protection (over 1.5A for 20 seconds continuously) 0 – disable 1 – enable	1

14	2	Power automatic report absolute threshold, unit is W When power changes above the absolute threshold, immediately report current power value	10
15	1	Power automatic report percentage threshold, unit is % When power changes above the percentage threshold, immediately report current power value	20
21	4	Power metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400, when set as 0, report function disabled	600 (10 minutes)
22	4	Energy metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400, when set as 0, report function disabled	1800 (30 minutes)
23	4	Voltage metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400, when set as 0, report function disabled	0
24	4	Current metering automatic report time cycle, unit is second Valid time cycle value: 5~2678400, when set as 0, report function disabled	0

Wiring Diagram

Notes for the diagrams:

L - terminal for live lead

N - terminal for neutral lead

Out - output terminal of the dimmer (controlling connected light source)


\$1 - terminal for switch (has the option of entering the device in inclusion/exclusion mode)

COM - terminal for grounding to the switch connected to the dimmer

Compatible Load Types

	Supported load types			
	Resistive loads Conventional incandescent and halogen light sources	Max. 288W		
	Capacitive loads Fluorescent tube lamp (compact / with electronic ballast), electronic transformer, LED	Max. 200W		
•	Inductive loads Ferromagnetic transformers	Max. 220W		


(1) 2-Wire Connection With No Neutral Lead

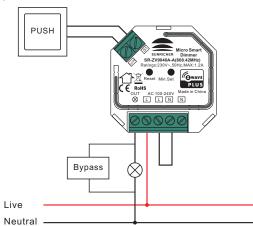

NOTE: Switch connected to the S1 terminal activates the basic functionality of the dimmer (turning the light on/off, dimming) and starts the inclusion/exclusion mode (Add/Remove).


The Bypass is a device designed to work with the micro smart dimmer. It should be used in case of connecting LED bulbs or energy saving compact fluorescent lamps. The Bypass prevents flickering of the LED lights and glowing of the turned off compact fluorescent lamps. In the case of 2-wire connection, the Bypass allows to reduce minimum power of load required by the dimmer for correct operation. The Bypass provides powering of the dimmer in case of controlling the low loads of minimum power down to 5VA (for $cos\phi>0.5$).

(2) 3-Wire Connection With Neutral Lead

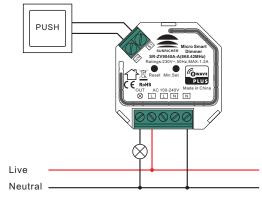

NOTE: Switch connected to the S1 terminal activates the basic functionality of the dimmer (turning the light on/off, dimming) and starts the inclusion/exclusion mode (Add/Remove).

(3) 3-Way Switch Connection

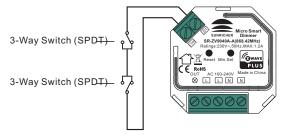

(4) Momentary Wall Switch Connection

